


# A Guide to setting up an ignition alarm



# What is an Ignition alarm?


An ignition alarm can be created to alert you when a vehicle ignition has been switched on or off during a certain time period e.g weekdays after 7pm or weekends.

1

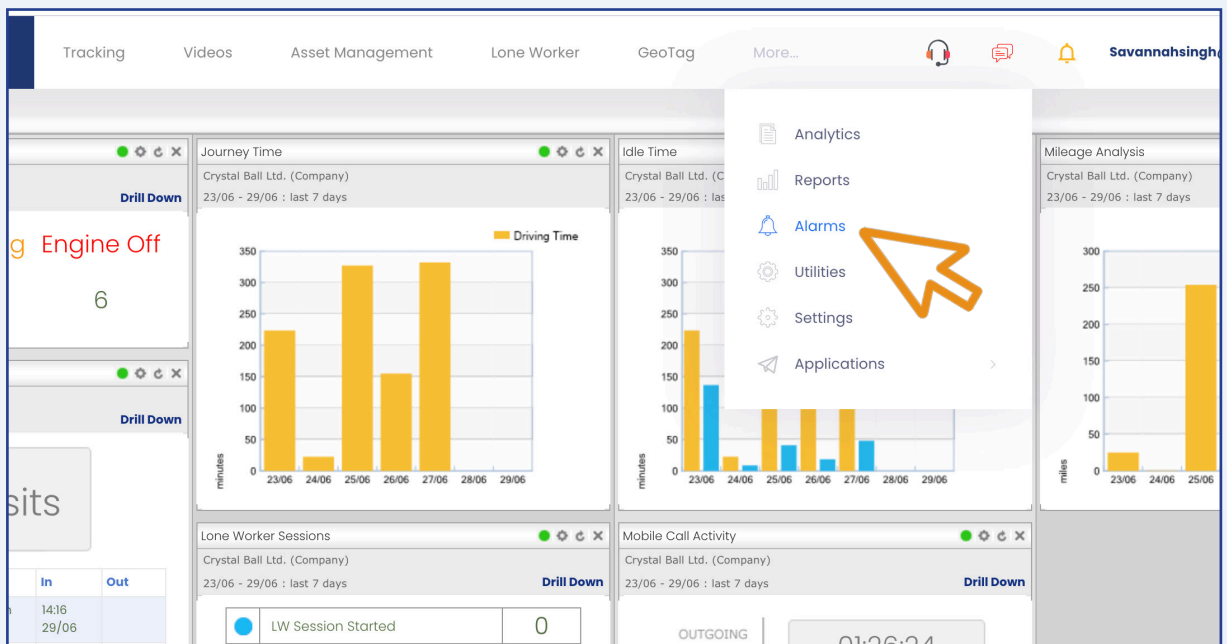


First, select 'More' and then 'Alarms'.

2

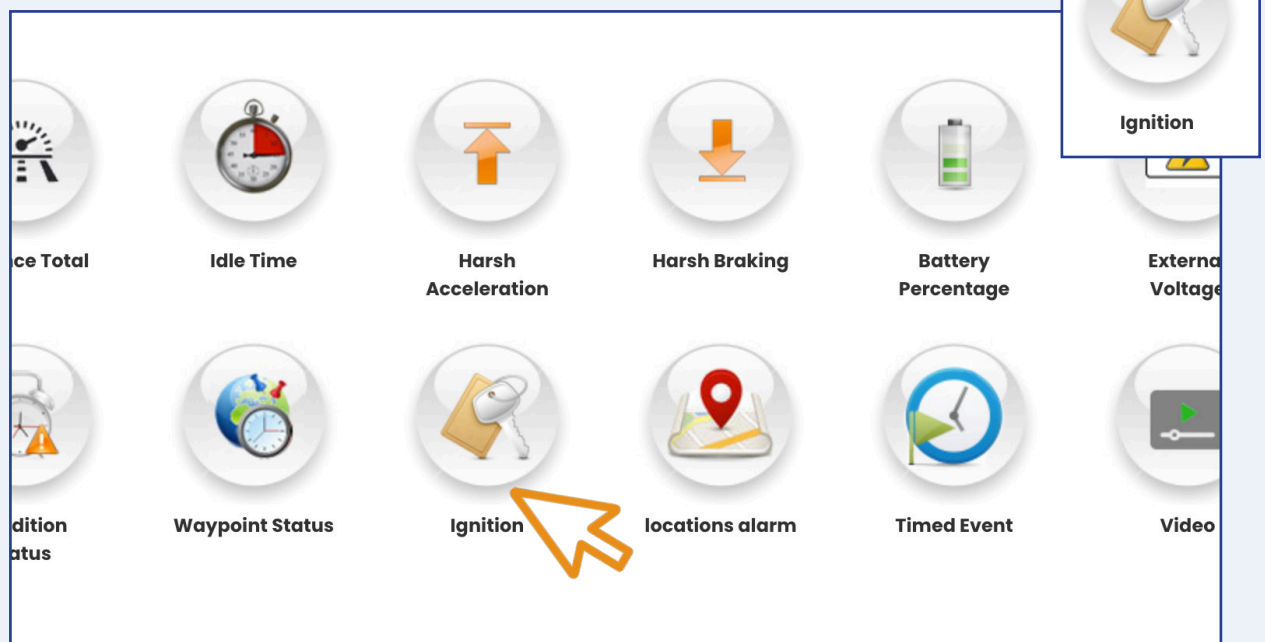


Once in 'Alarms', select 'Ignition'.

# 3

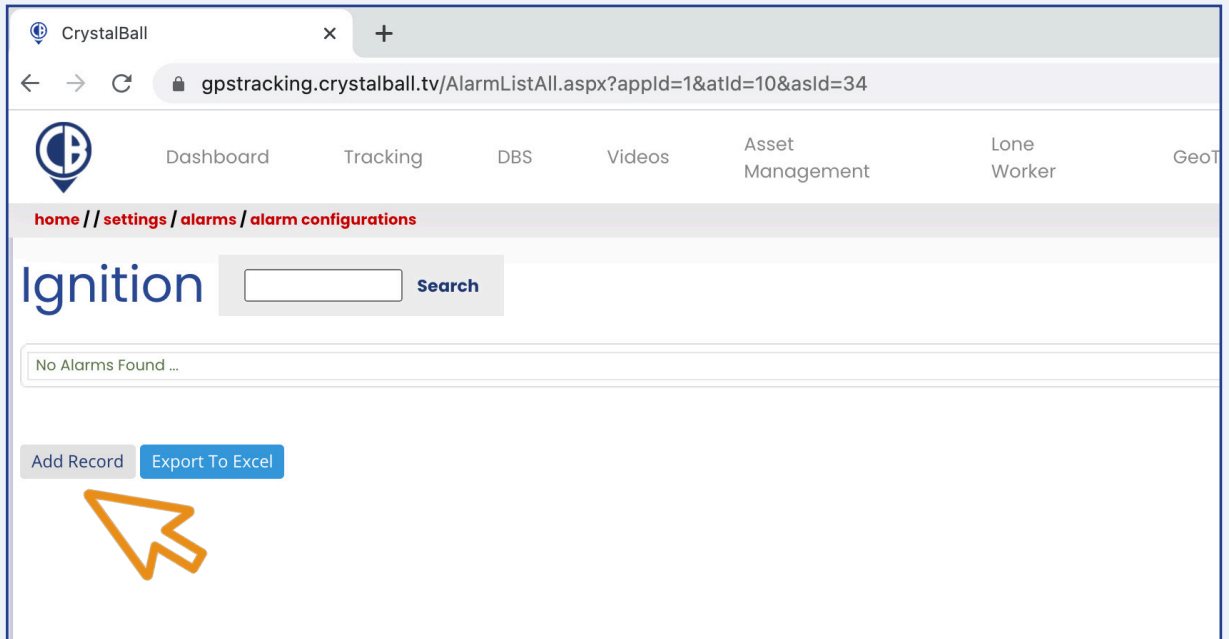


Select 'Add Record'.

# 4

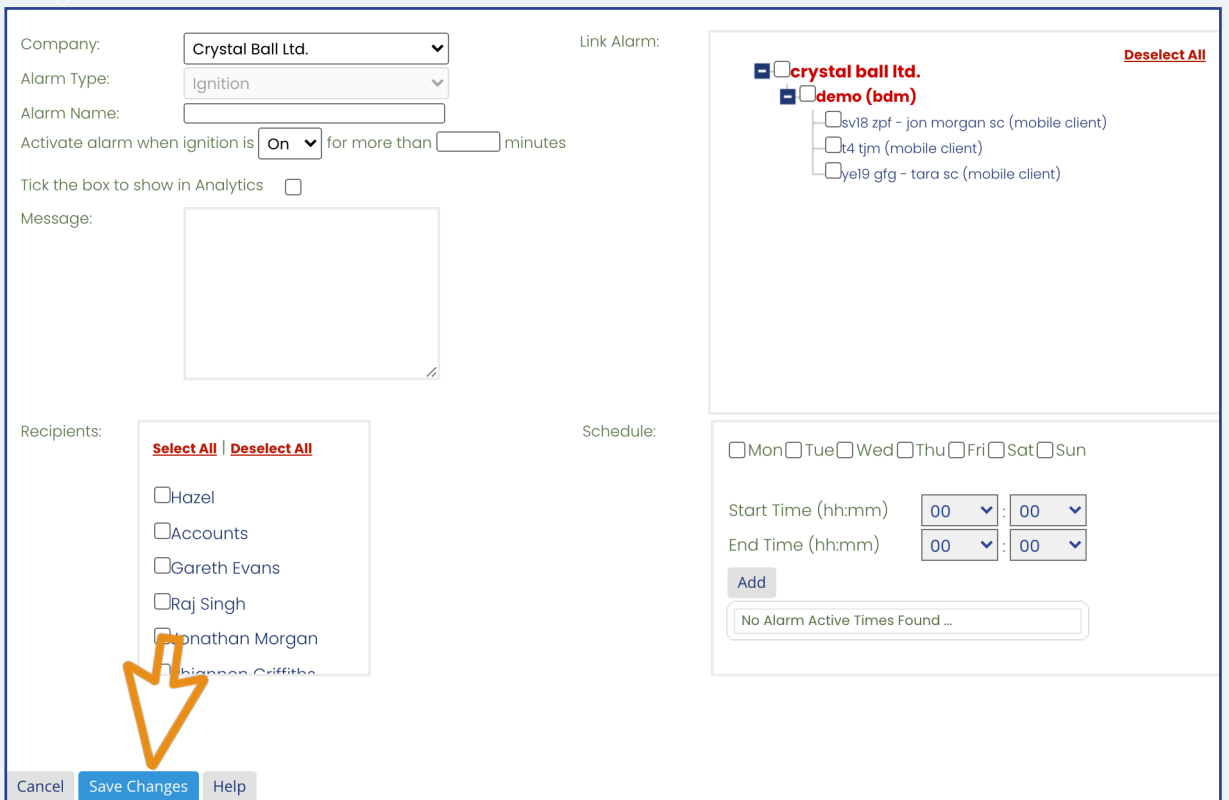


- Name the alarm and select whether you would like the alarm to be activated when the ignition has been on or off for x number of minutes.
- Tick the 'analytics' checkbox if you want triggered alarms to display when using the analytics feature (More > analytics).
- You can also add a brief message for display, upon activation of the alarm.
- Select a recipient/s from the list (if the recipient is not listed go to step 5).
- Select a vehicle/s from the right hand side and create a schedule if you would like the alarm to be triggered at certain times/days. This can be left blank if you require the alarm to be triggered at all times.

# 5

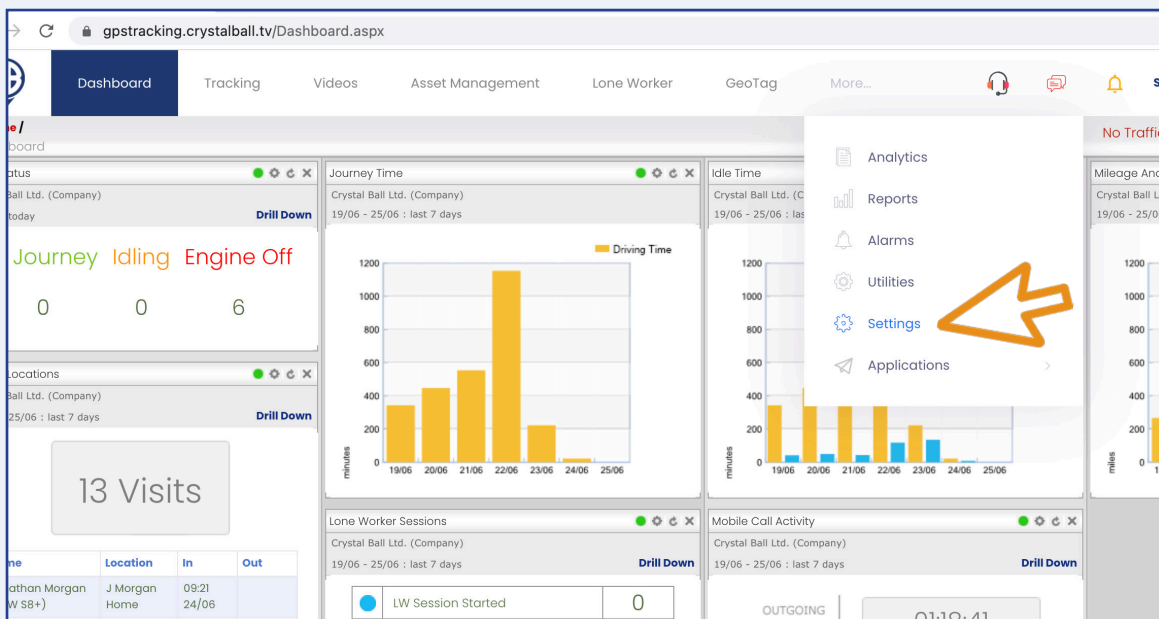


To add a new recipient, select 'More' and then 'Settings'.

# 6

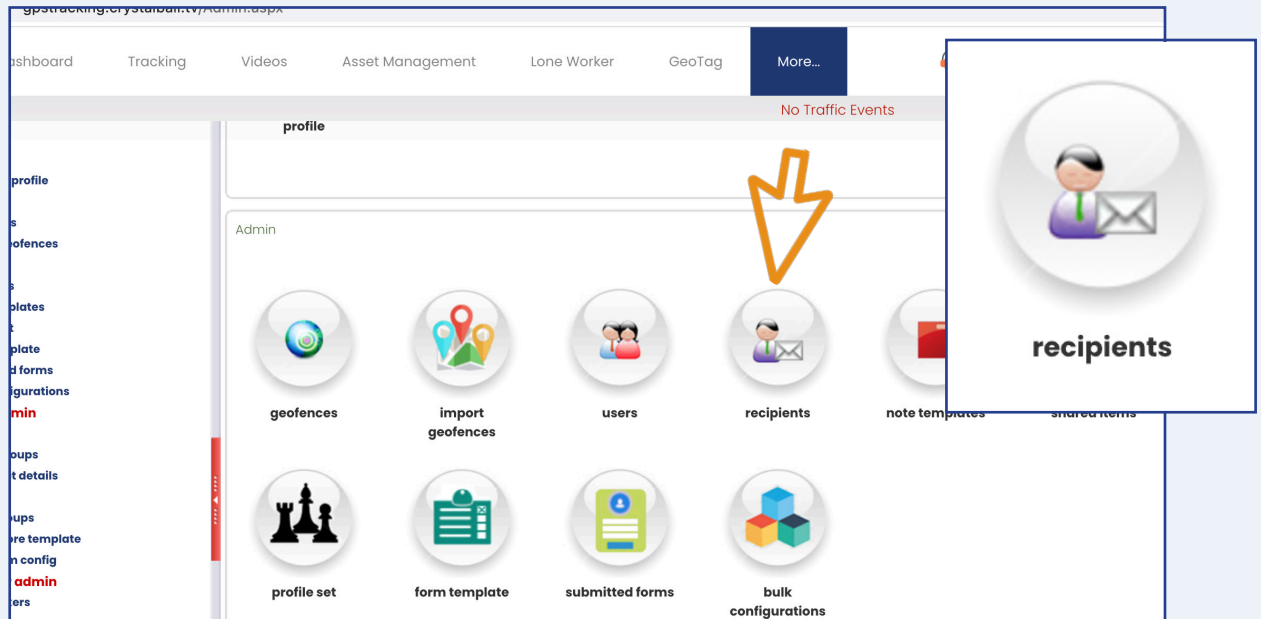

Once in 'Settings', select 'Recipients'.

# 7

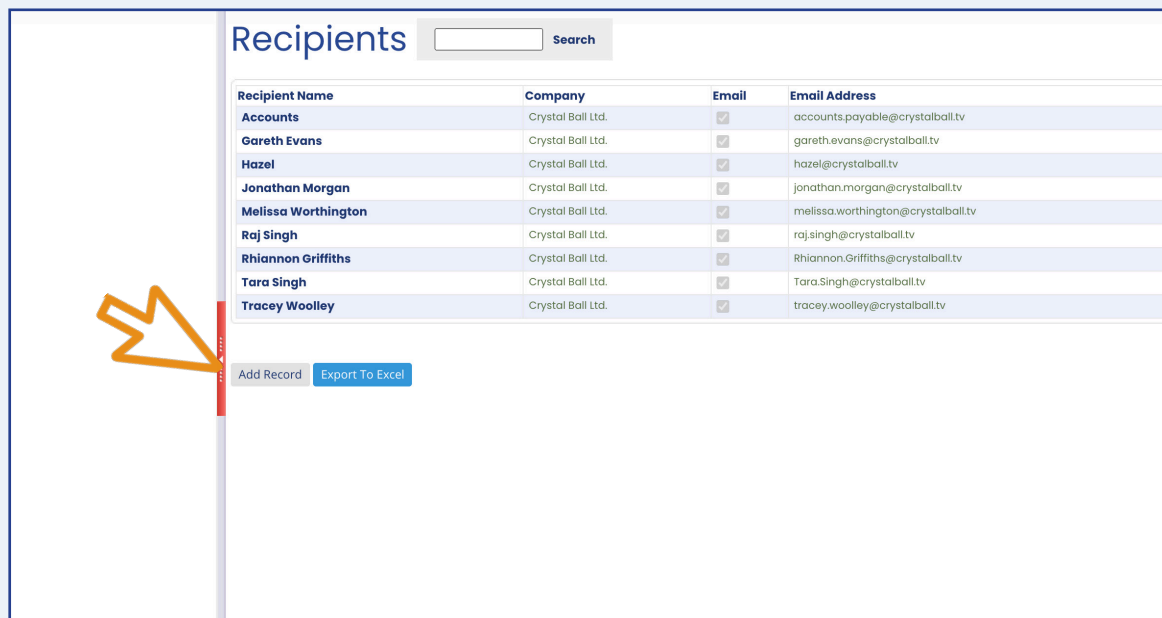

Select 'Add Record'.

8


## Recipient

Name

Email ☒

Email Address

Company



Fill in your information, ensuring you tick the 'Email' box and then select 'Save Changes'.



0330 995 9950

[www.crystalball.tv](http://www.crystalball.tv)